

PAYMENT TYPES

Laundry
CONNECT



MOBILE PHONE

PAY BY SCANNING THE
QR CODE WITH YOUR MOBILE PHONE



PAY AT MACHINE



LAUNDRY WALLET

PAY BY SCANNING YOUR
PRE-LOADED LAUNDRY CARD

PAY AT MACHINE

INSTRUCTIONS

- 1 Load laundry into the machine and lower the lid/close the door
- 2 To pay by Snapscan:
Scan QR code to pay
OR
To pay with Laundry Wallet:
Tap the modem with your pre-loaded laundry card
- 3 Machine will start on receipt of payment

No Lights = OFFLINE

Solid red = OFFLINE

Flashing blue = ONLINE

WHEN TAPPING THE CARD:

Orange = IN PROGRESS

Green = SUCCESS

Red = FAILED